	Manual for Updating Function A1410 Pulsar	Ident. No.	P-Up-A1410
		Rev. No.	1
		Seite/Page	1 von/of 7

Manual for Updating Function A1410 Pulsar

Table of Content

1	General Information	1
2.	Update step by step	2
2.1	Switching on the device in “Update Mode”.	2
2.2	Starting the Process	3
2.3	Finishing the process	7

1 General Information

This document describes the updating process for the A1410 Pulsar device.


NOTICE

System updates shall only be executed by authorised personnel.

! WARNING

Always check that your device is sufficiently charged or connect the device to the charging unit. Switching of the device due to power loss or manually by accident or purpose will interrupt the updating process and the device will be damaged.

- 2. Update step by step
- 2.1 Switching on the device in "Update Mode".

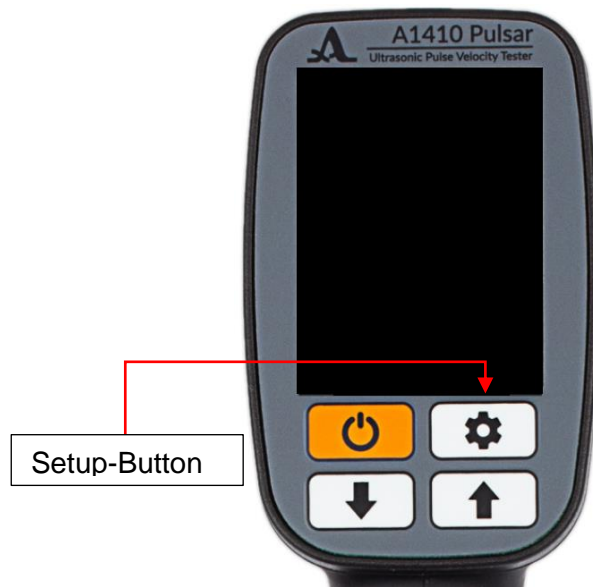

Pic. 1: A1410 scheme

1. Hold Setup-Button.
2. Insert USB cable, connected to your PC.
3. Hold Setup-Button until Firmware updater is started.
4. Release Setup-Button




Pic. 2: A1410 Firmware updater screen




2.2 Starting the Process

1. Observe which USB-Device will be added to your explorer, representing your Pulsar

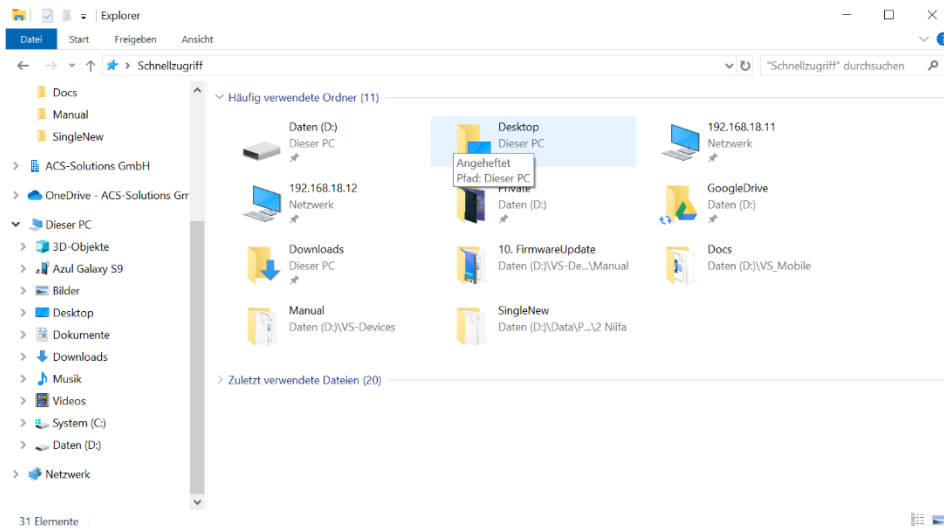


Pic. 3: Explorer before connection to Pulsar

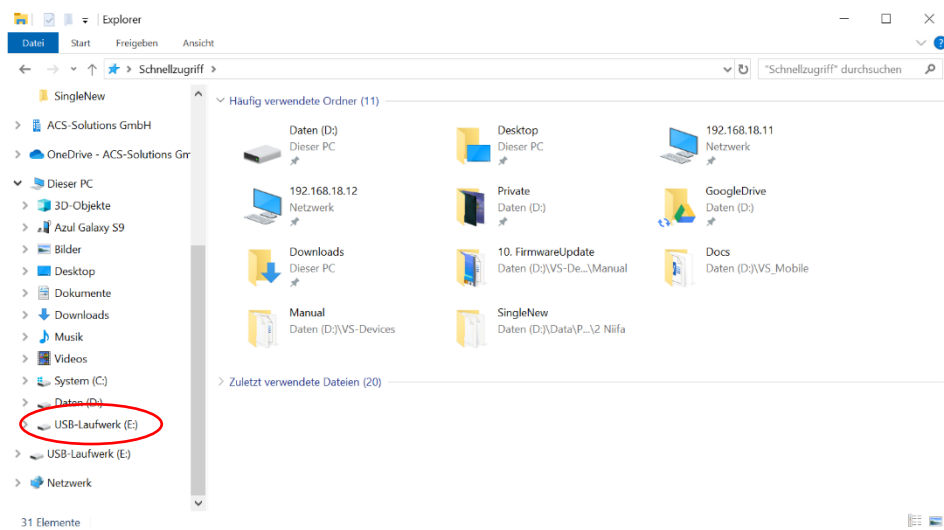

Pic. 4: Explorer after connection to Pulsar




2. Open the folder containing the .bin file

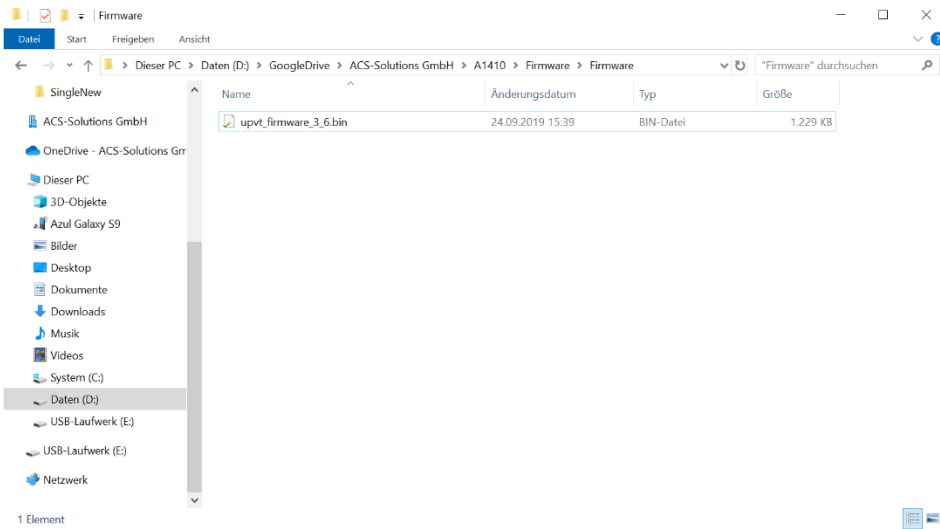

Pic. 5: Folder containing the .bin file

3. Drag and Drop the .bin file to the USB-Device

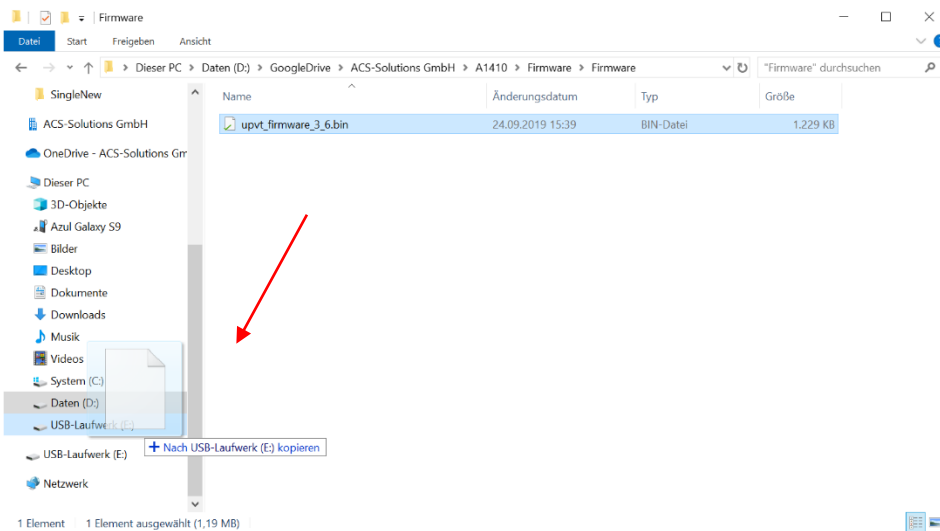


Pic. 6: Drag and Drop the .bin file to the USB-Device

- The updating process will start immediately after “dropping” the .bin file. During the process a progress bar will be shown. You can see the progress on the PC also.



Pic. 7: Screen during update process

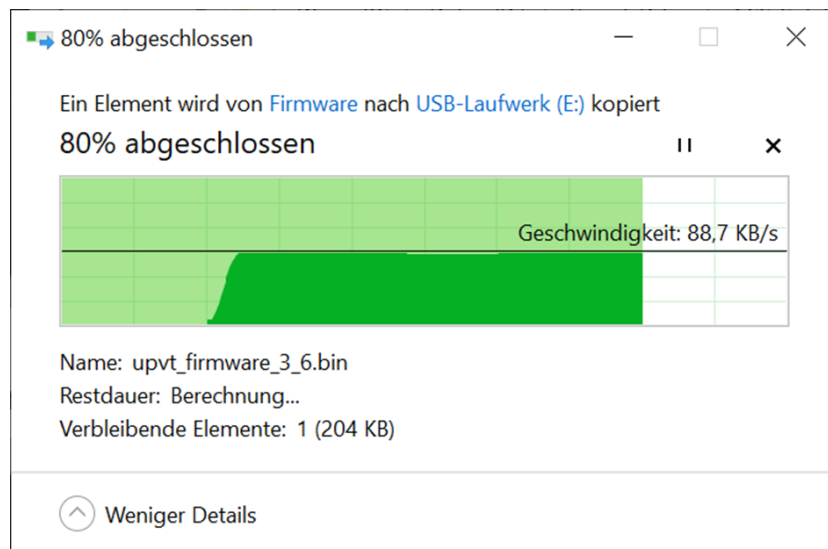

Pic. 8: Screen during update process

- After the process is finished, the progress bar is fully filled




Pic. 9: Screen during update process

6. Switch of the Pulsar



2.3 Finishing the process

Reset Device to Factory Settings.

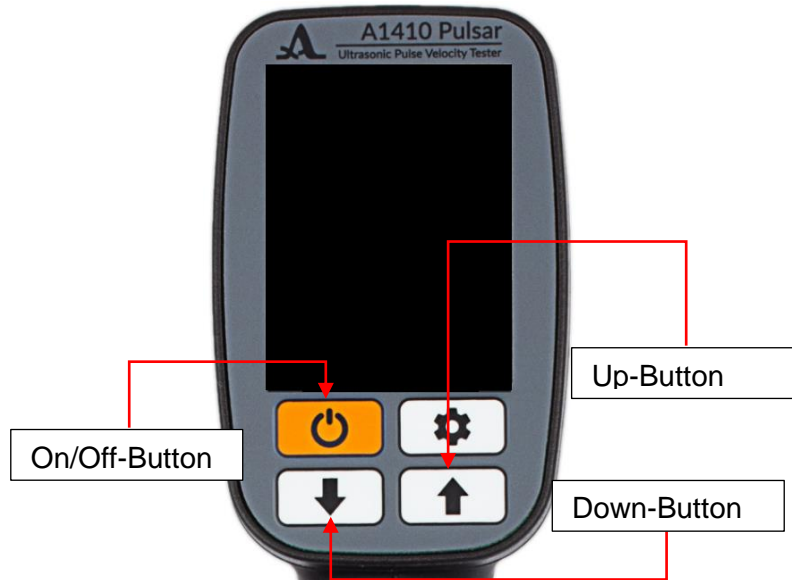

Pic. 10: A1410 scheme

1. Hold Down-Button and Up-Button.
2. Press on/off-Button.
3. Release on/off-Button.
4. Release Down-Button and Up-Button

The Pulsar should now be operational.